PHILIPS

15GR2331-
17GR2341

PHILIPS

PHILIPS

Downloaded from www.Manualslib.com manuals search engine

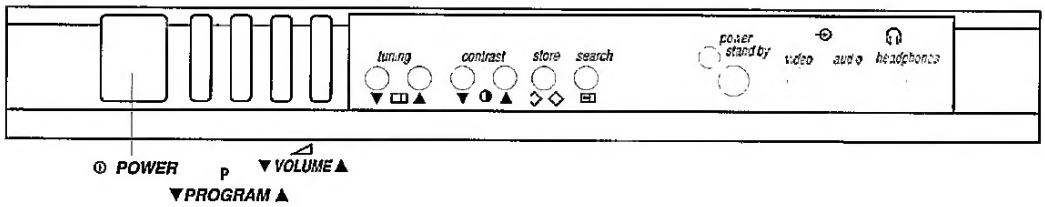

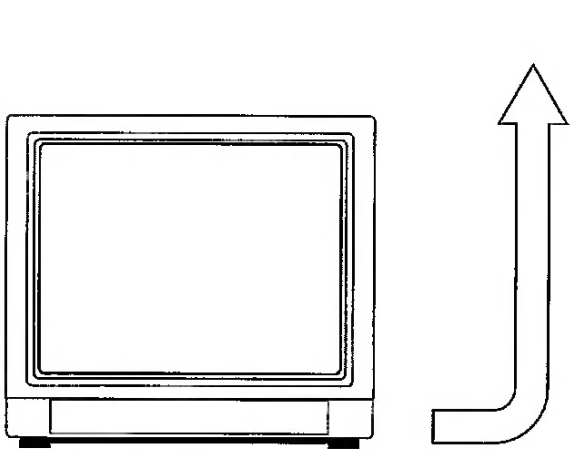

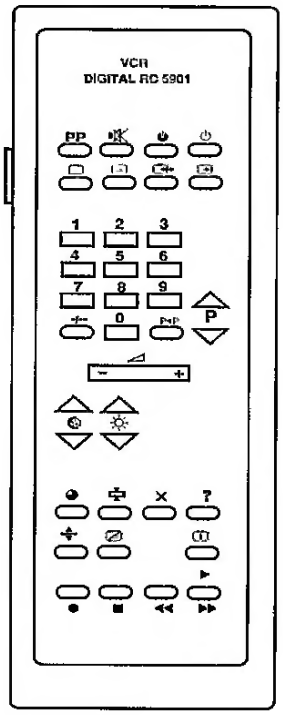

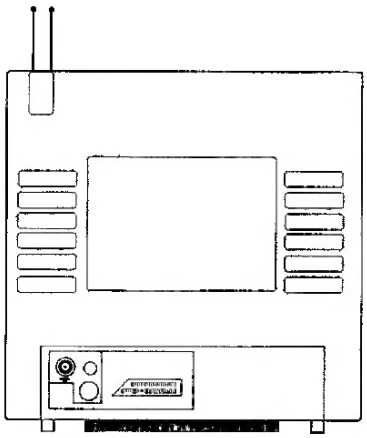

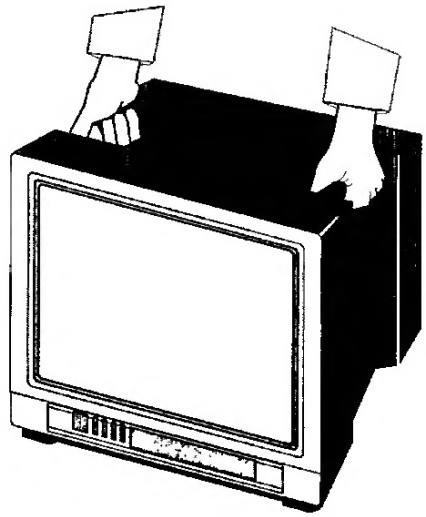

Downloaded from www.Manualslib.com manuals search engine

English	**Operating instructions** Page 1 - 9
Deutsch	**Bedienungsanleitung** Seite 10 - 18
Français	**Mode d'emploi** Page 19 - 27
Nederlands	**Gebruiksaanwijzing** Pagina 28 - 36
Italiano	**Istruzioni per l'uso** Pagina 37 - 45
Español	**Instrucciones de manejo** Página 46 - 54
Português	**Modo de emprego** Página 55 - 63
Dansk	**Betjeningsvejledning** Side 64 - 72
Norsk	**Bruksanvisning** Side 73 - 81
Svenska	**Bruksanvisning** Sidan 82 - 90
Suomi	**Käyttöohje** Sivu 91 - 99
Ελληνικα	**'Οδηγίες χρήσεως** σελίδα 100 - 108

PAL/SECAM (B + G)

Only if your TV is suitable for PAL/SECAM
This colour television set is only suitable for reception of both PAL and SECAM (B + G) transmissions. Switch-over from PAL to SECAM (B + G) or vice versa is fully autometic. (GB)

Nur bei Fernsehgeräten, die fur PAL/SECAM - Empfang geeignet sind.
Dieses Farbfernsehgerät eignet sich nur für den Empfang von PAL- und SECAM (B + G)-Übertragungen. Umschaltung von PAL auf SECAM (B + G) erfolgt vollautomatisch. (D)

Uniquement si votre téléviseur est adapté aux standards PAL/SECAM
Ce téléviseur coulour n'a été conçu que pour la réception des émissions selon les systèmes PAL et SECAM (B + G). La commutation PAL-SECAM (B + G) ou inversement se fait entiérement autometiquement. (F)

Solo se il vostro televisore è adatto per i sistemi PAL/SECAM
Questo televisore a colori è adatto per la ricezione solemente dei progremmi trasmessi secondo i sistemi PAL e SECAM (B + G). La commutazione dal sistema PAL a quello SECAM (B + G) o viceverse avviene automaticamente. (I)

Si su aparado esta preparado para PAL/SECAM
Este televisor en color sirve sólo para el sistema de transmision PAL y SECAM (B + G). El aparato se conmuta automaticamente de uno a otro. (E)

Η εγχρωμη τηλεοραση ειναι καταλληλη στο να λαμβανει PAL και SECAM μεταδοσεις (B + G). Η λειτουργια απο PAL σε SECAM και αντιστροφα ειναι ολοκληρωτικα αυτοματη. (GR)
: μόνο στον η τηλεσροοη σας ειναι κοτάλληλη γιο PAL/SECAM.

Downloaded from www.Manualslib.com manuals search engine

Information for users in the UK

(Not applicable outside the UK)

Service for you

Your colour television has been designed and manufactured to the highest standards, and subject to rigorous testing. Provided it is properly operated and maintained it will perform well for meny years. Howevar, we all know that in such complex equipment components can sometimes fail.
The legal responsibility for meeting any in-guarantee service needs for your receiver rests with the dealer from whom you bought it. If your dealer has no service facilities, he can arrange for eny work to be carried out by a competent third party organisation.
In any event you may expect speedy attention to restore your set to full working order without delay.

Free service for 2 years:
The dealer from whom the receiver was purchased will arrange for any defect in manufacture or material to be rectified without charge for a period of 2 years from the date of initial consumer sale provided:

- reasonable evidence is supplied that the set was purchased within 2 years prior to the date of claim
- the defect is not due to use of the set on an incorrect voltage or contrary to the Company's Operating Instructions or to accidental damage (whether in transit or otherwise); misuse; neglect; unauthorised or inexpert modification or repair.

The picture tube guarantee is administered by Philips Components Limited.
In addition to the customary 2 years free tube guarantee, Philips Components will consider extending the guarantee period, please see the separate card enclosed for details.

Service after 2 years:
Continuing service after 2 years is available in the seme way but the service will be chargeable.

These statements do not affect your statutory rights as a consumer.

If you have any question which your dealer cannot answer, please write to:

C.E. Consumer Relations Department
P.O. Box 298
420 London Road
Croydon CR9 3QR

All enquiries and claims can be handled more efficiently if accompanied by the Identity Card printed on the back cover of this booklet – this is provided for your reference and should be kept in a safe place.

Positioning the TV

For the best results, choose a position where light does not fall directly on the screen, and at some distance away from radiators or other sources of heat. Leave a space of at least 3 cm all around the TV for ventilation, making sure that curtains, cupboards etc. cannot obstruct the air flow through the ventilation apertures.
The TV is intended for use in a domestic environment only and should never be operated or stored in excessively hot or humid atmospheres.

General Points

Please take note of the section 'Generel' at the end of the English section in this booklet.

Interference
The Department of Trade and Industry operates a Radio Investigation Service to help TV licence holders improve raception of BBC and IBA programmes where these are being spoilt by interference. If your dealer cannot help, ask at a main Post Office for the booklet 'How to Improve Television and Radio Reception'.

Mains connection

Before connecting the TV to the mains, check that the mains supply voltage corresponds to the voltage printed on the type plate on the rear panel of the TV. If the mains voltage is diffarent, consult your dealer.

Important
The wires in the mains lead are coloured in according with the following code.

BLUE = NEUTRAL
BROWN = LIVE

To fit a mains plug:

Connect the BLUE wire in the mains lead to the NEUTRAL terminal of the plug, marked 'N' or coloured black.

Connect the BROWN wire in the mains lead to the LIVE terminel of the plug, marked 'L' or coloured red.

Do not make any connection to the terminal in the plug which is marked by the letter 'E' or by the sefaty earth symbol ⏚ or coloured green or green-end-yellow.

If the mains plug (or adapter) contains a fuse, this should heve a value of 3A. If a plug without a fuse is used, the fuse at the distribution board should not be greater then 5A.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead – not only over the two wires.

Connecting the aerial

The aerial should be connected to the socket marked ⊓ at the back of the set. An inferior aerial is likely to result in a poor, perheps unstable picture with ghost images and lack of contrest. Make-shift loft or set-top aerials are often inadequate. Your dealer will know from experience the most suitable type for your locality.
Should you wish to use the set in conjunction with other equipment, which connects to the aerial socket such as TV games, or a video camera it is recommended that these be connected via a combiner unit to avoid repeated connection and disconnection of the aerial plug.

Loop aerial (if provided)
The loop aerial packed with the set will giva satisfactory reception under good signal conditions.
Attach the ends of the loop to the mounting studs on the bracket and fit and tighten the knurled nuts. Then insert the plug on the lead into the aerial socket.

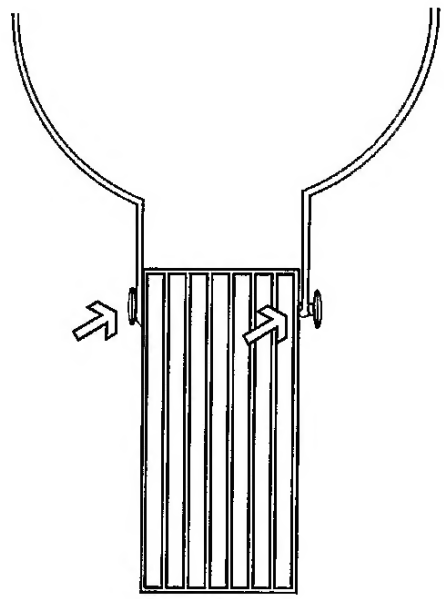

Downloaded from www.Manualslib.com manuals search engine

Installing and adjusting the TV — Page 2 to 3

introduction
to instell the TV
to connect the TV
to switch the TV on and off
to insert batteriee In the remote control handset
to test the remote control handset
to store TV stetions on program numbers

Operating the TV — Page 3 to 5

to select TV stations using program numbers
to change the picture and sound settings
to select stend-by mode
to display picture and sound information

Additional features — Page 5 to 8

to operate Teletext
to connect e video recorder
to connect other devices
to connect headphones

General information — Page 9

to fine tune the picture quality
to store your own personal preference velues
to clean the TV ecreen
fault indication

Downloaded from www.Manualslib.com manuals search engine

Installing the TV

Introduction
If you follow these operating instructions you will quickly learn how to adjust and operate all the functions of your new TV; but always read and perform the instructions in the sequence shown.

TV - Indicates actions that are performed using the TV buttons or sockets.

- Indicates actions that are performed using the remote control handset.

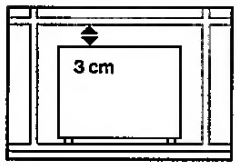

TV To install the TV
- Remove any packaging from the TV.
- Find the remote control handset within the packaging.
- Place the TV on a solid base (e.g. a TV/video cabinet).
- Leave at least 3 cm around each side of the TV for ventilation.

TV To connect the TV
IMPORTANT: The TV is only suitable for a mains voltege of 220/240 V ~ , 50 Hz (Consult your dealer if the mains supply is different).

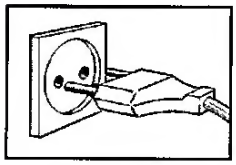

- Connect the TV to the mains supply socket.

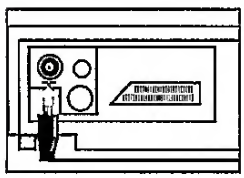

- Connect the aerial plug to the socket et the back of the TV.

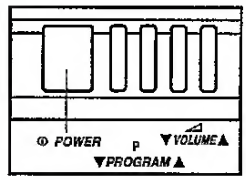

TV To switch the TV on
- Press the ⏻ power button on the front of the TV.
- If the GREEN colour is displayed on the lamp below the screen then the TV is switched on.

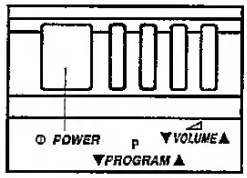

- If the RED colour is displayed on the lamp below the screen then you must press the▼P or▲P program button. The TV will then switch on and the GREEN colour will be displayed on the lamp (for further information refer to the section 'to select stand-by mode').

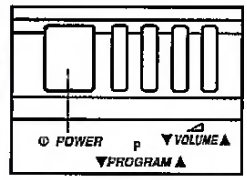

TV To switch the TV off
- Press the ⏻ power button on the front of the TV.
(If you want to switch off the TV temporarily refer to the section 'to select stand-by mode'.)

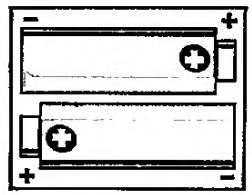

To insert batteries in the remote control handset
- Remove the battery cover on the back of the remote control handset.
- insert the two batteries supplied (type LRO3 1.5V).
- Replace the battery cover.

To test the remote control handset
- Switch on the TV.
- Hold the remote control handsot and direct it towards the GREEN coloured lamp below the TV screen.
- Press any **digit** button on the remote control handset. The GREEN coloured lamp will 'flash' ORANGE each time a button is pressed.

Downloaded from www.Manualslib.com manuals search engine

Adjusting the TV

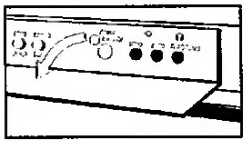

The buttons for adjusting the TV are located behind the cover on the control panel. To open, simply press the cover. It should be closed again once the required adjustments have been made.

TV To store TV stations on program numbers
(Upto 60 TV stations can be stored on program numbers using the following method.)



1. Press the ◇ ◇ button, so that information is displayed about the current program number.



2. Press the ⏭ button so that the TV **autometically** searches until a TV stetion is found and displayed on the screen. If you want to continue searching for a specific TV station then press the ⏭ button again.

3. Select the required program number (0 to 59) by pressing the▼P or▲P program button. The selected program number is displayed on the screen.

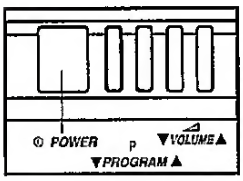

4. Press the ◇ ◇ button to store the selected TV station and program number. The program number information is now removed from the screen.



Repeat steps 1 to 4 until all the TV stations you require have been stored on program numbers.

Note: You can write your TV station selections in the table provided in the inside cover.

Operating the TV

You can now operate your TV either using the remote control handset or directly using the TV buttons.

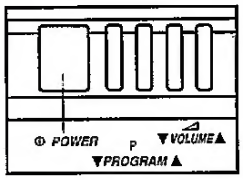

- Switch on the TV by pressing the ⏻ power button on the front of the TV.

To select TV stations using program numbers

After the TV is switched on:

To select TV stations using program numbers 0 to 9
- Press the appropriate digit button on the remote control handset. The selected program number end TV station now appear on the screen.
- Press a different digit button to make another selection.

To select TV stations using program numbers 10 to 59
- Press the -/-- button.

P-- is displayed on the screen.
- Press two appropriate digit buttons.

The selected program number and TV station now eppear on the screen.
- Repeat the above procedure to meke another two-digit program selection.

To select a lower or higher program number
- Press the △ P button to select a higher program number.
- Press the ▽ P button to select e lower program number.

To select the previously used program number
- Press the P◁P button to select the previous program number.

Downloaded from www.Manualslib.com manuals search engine

Operating the TV

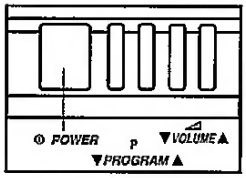

TV To select TV stations using the TV buttons

- Press the▲P program button to select a **higher** program number.
- Press the▼P program button to select a lower program number.

TV and To change the picture and sound settings

(When the TV is first switched on the picture and sound settings are always at preferred or 'personal preference' values. Initially these values have been stored by the factory, but you can change them using the sound and picture buttons on the TV or remote control handset.)

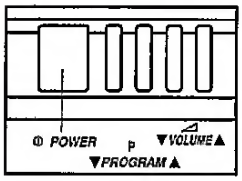

TV To change the volume

- Press the▲button to increase the volume.
- Press the▼button to decrease the volume.



TV To change the contrast of the picture

- Press the ▲ button to increase the amount of contrast.
- Press the ▼ button to decrease the amount of contrast.

Note: The contrast button is only available on the TV.

To change the volume

- Press the + button to increase the volume.
- Press the — button to decrease the volume.

To change the colour intensity

- Press the △ button to increase the colour intensity.
- Press the ▽ button to decrease the colour intensity.

To change the brightness

- Press the △ button to increase the brightness.
- Press the ▽ button to decrease the brightness.

To return to the personal preference settings

- Press the PP button.

Note: If you refer to the General Information section you can also find how to store your own 'personal preference' values.

To select stand-by mode

The TV can be put into stand-by mode in **three** ways:

1. Directly

- Press the ⏻ button. The RED colour is displayed on the lamp located below the screen, and the TV is put into stand-by mode.

2. Using the timer

(With this method you can select a time period after which the TV switches to stand-by mode.)

- Press the ⏻ button until the required time period is displayed on the screen (the time period can be set in steps of 15 minutes starting from 90 minutes).

During the final minute of the selected time period, '01' is displayed on the screen informing you that the TV will switch to stand-by mode. At the end of this time period the TV switches to stand-by mode and the RED colour is displayed on the lamp located below the screen.

3. Automatically

Approximately 15 minutes after a TV station stops broadcasting ('closedown') the TV switches itself automatically to stand-by mode.

Downloaded from www.Manualslib.com manuals' search engine

Operating the TV

TV or To switch on the TV from stand-by mode
- Press a **digit** button on the remote control handset so that a program number is selected.

Or,
- Press the▼ P or▲ P button located on the front of the TV.

The RED colour lamp (located below the screen) changes to GREEN when the TV is switched on from stand-by mode.

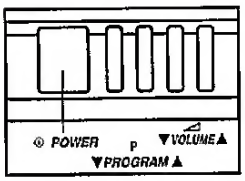

To switch off the sound
- Press the button to switch off ('mute') the sound.

is displayed on the screen.
- Press the button again to switch the sound on.

is removed from the screen.

To display picture and sound information
(The 'On-Screen-Display' allows you to see the information stored for a particular program number and TV station.)
- Press the button to display the information on the screen.

If you now make changes to the picture and sound using the appropriate buttons, then a moving bar is displayed which represents these changes as they are being made.
- Press the button again to switch off the additional information display.

Additional features

(This information only applies if your TV is able to receive Teletext.)

Teletext - is an information system that displays text on your TV screen. Using the Teletext information system you can select a page of information on a subject that is available in its list of contents (index).

To operate Teletext
- Select a TV station on which Telatext is being transmitted (check with a TV programme guide).
- Press the button. Usually the list of contents (index) is displayed on the screen.

The following procedures apply only after Teletext has been selected:

To select a page of Teletext
- Press the appropriate **digit** buttons for the required Teletext page number.

The selected pege number is displayed at the top left corner of the screen. The Teletext page counter searches until the selected page number is located, so that the required information is displayed on the screen.

To return to the index page
- Press the button to directly select the index page.
- Alternetively select the page number of the index (e.g. page 100).

To select Teletext with a TV programme
- Press the button. The text is now superimposed over the TV programme on the screen.
- Press the button again to return to the Teletext page.

To switch between Teletext and the TV programme
- Press the X button. The TV programme appears, and **TXT** is displayed in the top left corner of the screen.
- Press the X button again to return to the Teletext page.

Downloaded from www.Manualslib.com manuals search engine

Additional features

To select double height text
- Press the ⇳ button for the top half of the information page to be displayed in double height text.
- Press the ⇳ button for the bottom half of the information page to be displayed in double height text.
- Press the ⇳ button again for the full page of normal height text.

To reveal 'concealed' information
(Sometimes a Teletext page contains concealed information, for example in a quiz or puzzle.)
- Press the ? button. The concealed information is then displayed on the screen.
- Press the ? button again so that the concealed information is removed from the screen.

To stop an automatic page-change
(More information may follow the page of Teletext you have selected; and it is automatically displayed after a short period of time).
- Press the ⇳ button to stop the automatic page-change.
- Press the ⇳ button again so that the next page of text can be displayed.

To select a time-planned page
(You can select a page of Teletext information which can then be displayed on the TV screen at a certain time.)
- Select the required Teletext page.
- Press the ◕ button.
- Select the required time by pressing four **digit** buttons (e.g. 20.10).
- Press the ✕ button to return to a previously selected TV programme.

When the selected time is reached:

either,
The required Teletext page is superimposed over the TV programme.
- Press the ✕ button to remove the TV programme from the screen.

or,
The time is displayed in the top left corner of the screen.
- Press the ✕ button to display the Teletext page on the screen.

- Press the ◕ button to cancel this 'time-planned page' selection.

To select a subcode page
(Subcode pages are sub-sections of long Teletext pages that can only be displayed on the screen one section at a time.)
- Select the required Teletext page.
- Press the ◕ button.
- Press a digit button (for the required subcode page).
- If the subcode page is not immediately available then press the ✕ button to return to the TV programme. When the subcode page becomes available the subcode number is displayed in the top left corner of the screen.
- Press the ✕ button to display the subcode page.

note: Time-planned and subcode pages are only available with certain pages on some Teletext broadcasts.

To select a Teletext subtitled TV programme
(Subtitles can only be displayed on the screen if the TV station adds this facility to the TV programme - check with a TV programme guide.)
- Select the Teletext page indicated in the TV programme guide.

The TV programme with subtitles now appears on the TV screen.

To 'fast' select Teletext pages
(Sometimes a page of Teletext information can be selected quickly.)
- The next sequential page of Teletext information can be selected by pressing the RED button (e.g. page 101 can be selected after page 100).

or,
The subject-heading for the information may have a particular colour, or can be placed inside a coloured box.
- Press an appropriate RED, GREEN, YELLOW or BLUE button.

To exit Teletext
- Press the ▢ button. The previously selected TV station appears again on the screen.

To display the time
- Press the ◕ button. The current time is displayed in the top right corner of the screen. (e.g. 21.00).
- Press the ◕ button again to remove the time display.

note: The time can only be displayed when Teletext is available on the selected TV station.

Downloaded from www.Manualslib.com manuals search engine

Additional features

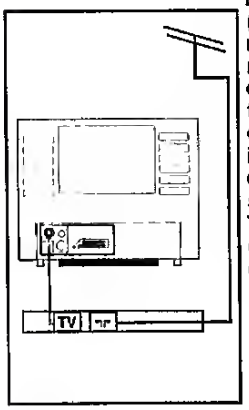

TV To connect e video recorder
(First you must refer to the operating manual supplied with your video recorder for connection details.)
- Switch off the TV before connecting the video recorder.
- Connect the TV aerial cable to the ⌐I¬ input on the video recorder.
- Connect one side of the cable supplied with the video recorder to the TV output of the video recorder and the other side of the cable to the ⌐I¬ input of the TV.



Additionally,
- A video recorder or camcorder can be connected at the video/audio Input sockets (cinch type) at the front of the TV for 'playback' of tapes only.

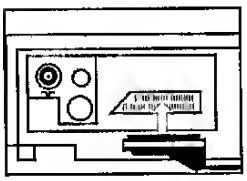

or,
- The video recorder can also be connected at the Euroconnector socket et the back of the TV (a support-bracket is also provided for the Euroconnector cable on the back of the TV).

Note: To obtain an optimal sound and picture signal we advise that you do not connect the video/audio input sockets end the Euroconnector simultaneously.

To select the device signal
- Switch on the TV.

When the video/audio or SVHS input sockets are used the device signal is available in external mode 1 (EXT 1):

- Press the ⇥ button so that the device signal is received and EXT 1 is displayed on the screen.

When the Euroconnector is used then the device signal is available in either external mode 1 or 2 (EXT 1 or EXT 2): Certein devices connected to the Euroconnector socket will automatically switch the TV to receive the device signel.

If the TV does not automatically receive the device signal:

- Press the ⇥ button so that EXT 1 is displayed on the screen.

or,
- Press the ⇥ button egain so that EXT 2 is displayed on the screen.

- To return to normal TV operation press the ▭ button.

Note: It is **not** possible to search for e device signal using the ⏭ button when EXT 1 or EXT 2 mode is selected.

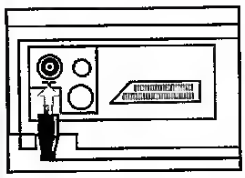

If the ⌐I¬ socket is used then the signal must be stored on e program number before it can be selected (refer to the section 'to store the video recorder signal on a program number').

TV To store the video recorder signal on a program number
(After you have connected the video recorder to the ⌐I¬ socket you can store the video recorder signal on a program number.)

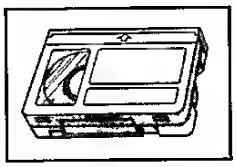

- Switch on the TV.

1. Insert e pre-recorded tape in the video recorder, and press the 'PLAY' button on the video recorder.



2. Press the ◇ ◇ button so that the program number information is displayed.

3. Press the ⏭ button so thet the TV automatically searches for the video signal. If necessery press this button again until the video signal is located.

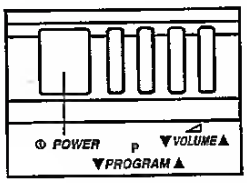

4. Select an available program number by pressing the▼P or▲P program button on the TV.



5. Press the ◇ ◇ button to store the video signal on the selected program number.

6. Press the 'STOP' button on the video recorder.

Downloaded from www.Manualslib.com manuals search engine

Additional features

To select the program number for the video recorder signal

- Press the appropriate **digit** button (for the progrem number on which the video signal has been stored).
- To return to normal TV operation press another **digit** button to select a TV station.

If the Euroconnector or video/audio input sockets are used then refer to the section 'to select the device signal'.

To operate a video recorder using the remote control handset
(The following information only applies if your video recorder uses the RC5 system for the remote control hendset.)

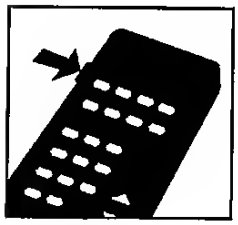

- Press and continue to hold the button located on the side of the remote control handset before selecting eny of the following functions:

- Press the ▶ button to 'PLAY' the video cassette.
- Press the ● button to 'RECORD' on the video cassette.
- Press the ■ button to 'STOP' the video cassette.
- Press the ◀◀ button to 'REWIND" the video cassette.
- Press the ▶▶ button to 'FAST FORWARD' the video cessette.

To connect other devices
e.g. computer, TV game, LaserVision player.
(First you must refer to the operating menuel supplied with the device.)



either,
A device with video (CVBS) output cen be connected to the video/audio input sockets on the front of the TV.

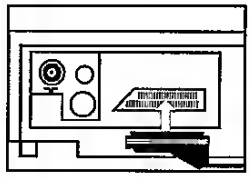

or,
A device with a Euroconnector cen be connected to the Euroconnector socket at the back of the TV (a support bracket is provided for the Euroconnector cable on the back of the TV).

or,
A device cen be connected to the ⅂Γ socket at the beck of the TV

- Switch off the TV.
- Connect the device.

or,
Audio devices cen be connected to the audio-output socket ('cinch' type) on the back of the TV.



To connect heedphones
(The heedphones used must be 8 to 1000 ohm, and 6.3 mm in diameter.)

- Connect the headphones jack-plug to the ∩ socket on the front of the TV.

Note: the loudspeeker is switched off automatically when the headphones are connected.

Downloaded from www.Manualslib.com manuals search engine

General information

TV To fine tune the picture quality
(The picture from a TV station or a device such as a video recordar may ba affactad by interference, e.g. from other strong signal sources.)

The pictura quality may be improved using the following method:



1. Press the ◇ button to display the program number information.



2. Press the ▼ or ▲ button, and release it immediately, so that the picture is fine tuned.

3. Press the ◇ button to store these changas.



TV and To store your own personal preference (PP) values
- Press tha ◇ button on the TV to display the program number information.
- Change the picture and sound settings (e.g. volume, contrast) using the remote control handset or TV controls.
- Press tha ◇ button on the TV to store these changes. The program number information is now removed from the screen.

To clean the TV scraan
- It is possible to clean tha TV screen using a slightly damp chamois leather. Never use aggressive cleaning agents.

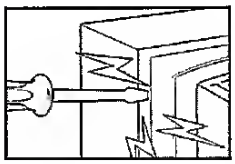

Fault indication
IMPORTANT: Never attempt to repair a broken TV yoursalf; always consult a skilled TV service engineer.

If the TV does not give tha dasired picture or sound quality atter switching on than chack that:
- the aerial is connected properly.
- all controls and buttons are selected correctly.
- the selected TV station is not 'closed-down'.
- the TV is not incorrectly switched to EXT 1 or EXT 2.
- the sound is switched on (not 'muted').

switch off the TV if:
- Indication F0, F1, F2, F3, F4, F5, F6 or F7 is displayed on the screen.
- a bright white line is displayed across the screen.

Downloaded from www.Manualslib.com manuals search engine

NOTES

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

GB **IDENTITY CARD**	This card, together with the terms of guarantee (to be provided by your dealer), forms the full certificate of guarantee for this appliance
D **GERÄTE-KENNKARTE**	Diese Karte ist, zusammen mit den Garantiebestimmungen, die Ihr Händler Ihnen aushändigt, Ihr Garantieschein für dieses Gerät.
F **CARTE D'INDENTIFI-CATION**	Associée aux conditions de garantie (qui vous sont remises par le revendeur), cette carte constitue le certificat de garantie de cet appareil
NL **INDENTIFI-CATIEKAART**	Deze kaart vormt, samen met de garantievoorwaarden (welke door uw dealer verstrekt worden), het garantiebewijs voor dit apparaat
I **CARTA D'IDENTIFI-CAZIONE**	Questa carta rappresenta insieme alle condizioni di garanzia (da consegnare dal vostro rivenditore) il documento di garanzia per questo apparecchio
E **TARJETA DE INDENTIFICACIÓN**	La garantía de este aparato se compone de esta tarjeta y de las condiciones de garantía que le entregará su concesionario.
P **CARTÃO DE INDENTIFICAÇÃO**	Este cartão, em conjunto com as condições de garantia em vigor (explicadas pelo seu vendedor) constituem o certificado de garantia do seu aparelho
DK **I.D. KORT**	Dette kort, udfyldt af Deres forhandler, er tilstrækkelig garantidokumentation for dette apparat.
N **IDENTIFIKA-SJOSKORT**	Dette kort, sammen med garantibetingelsene (som De får av forhandleren) utgjør garantibeviset for dette apparat
S **IDENTIFIERINGS-KORT**	Detta kort tillsammans med garantivillkoren, som Du får av rad ohandlaren, utgör ett fullständigt garantibevis för denna produkt.
SF **TUNNISTUS-KORTTI**	Tämän laitteen takuutodistus muodostuu tästä kortista ja takuuehdoista (jälleenmyyjä antaa nämä)
GR **ΔΕΛΤΙΟ ΤΑΥΤΟΤΗΤΑΣ**	Η κάρτα αυτή μαζί με τους όρους εγγυήσεως (που θα παραληφθούν από το κατάστημα που αγοράσατε την συσκευή) αποτελούν το πλήρες πιστοποιητικό εγγυήσεως της συσκευής σας

PHILIPS

PHILIPS
15GR2331/08B
PM069105 004062
220V~ 50Hz 50W
VHF+S+UHF

MADE IN ITALY

15GR2331
17GR2341

Printed in Italy by G.S.F. 90/12

RC 3119 106 1825.1

Downloaded from www.Manualslib.com manuals search engine